# Wall Kit
# Installation Instructions

***IMPORTANT!!!*** Whenever cutting through walls,
caution should always be taken to avoid Gas, Electric & Plumbing Lines.

Note: We recommend two persons to complete installation (Steps 3 & 4). If the Pet Door is not already installed, cut opening and drill holes using template provided with your pet door.

## Diagram 1




**Step #1.** Measure wall thickness. For 6-3/4" to 7-1/4" wall thickness use Wall Kit Panels "as is".
Screws are designed to fit widest possible wall thickness.
You may need to shorten screws by using a hack saw and de-burr cut end with file. For wall thickness less than 6-3/4" break-off the v-grooved edge sections (as shown in **Diagram 1**) from each of the six (6) Wall Kit panel sections- 1" from either side as needed.

**Step #2.** Assemble Wall Kit. Complete by press-fitting the six (6) panel sections together (as shown in **Diagram 2**).

## Diagram 2

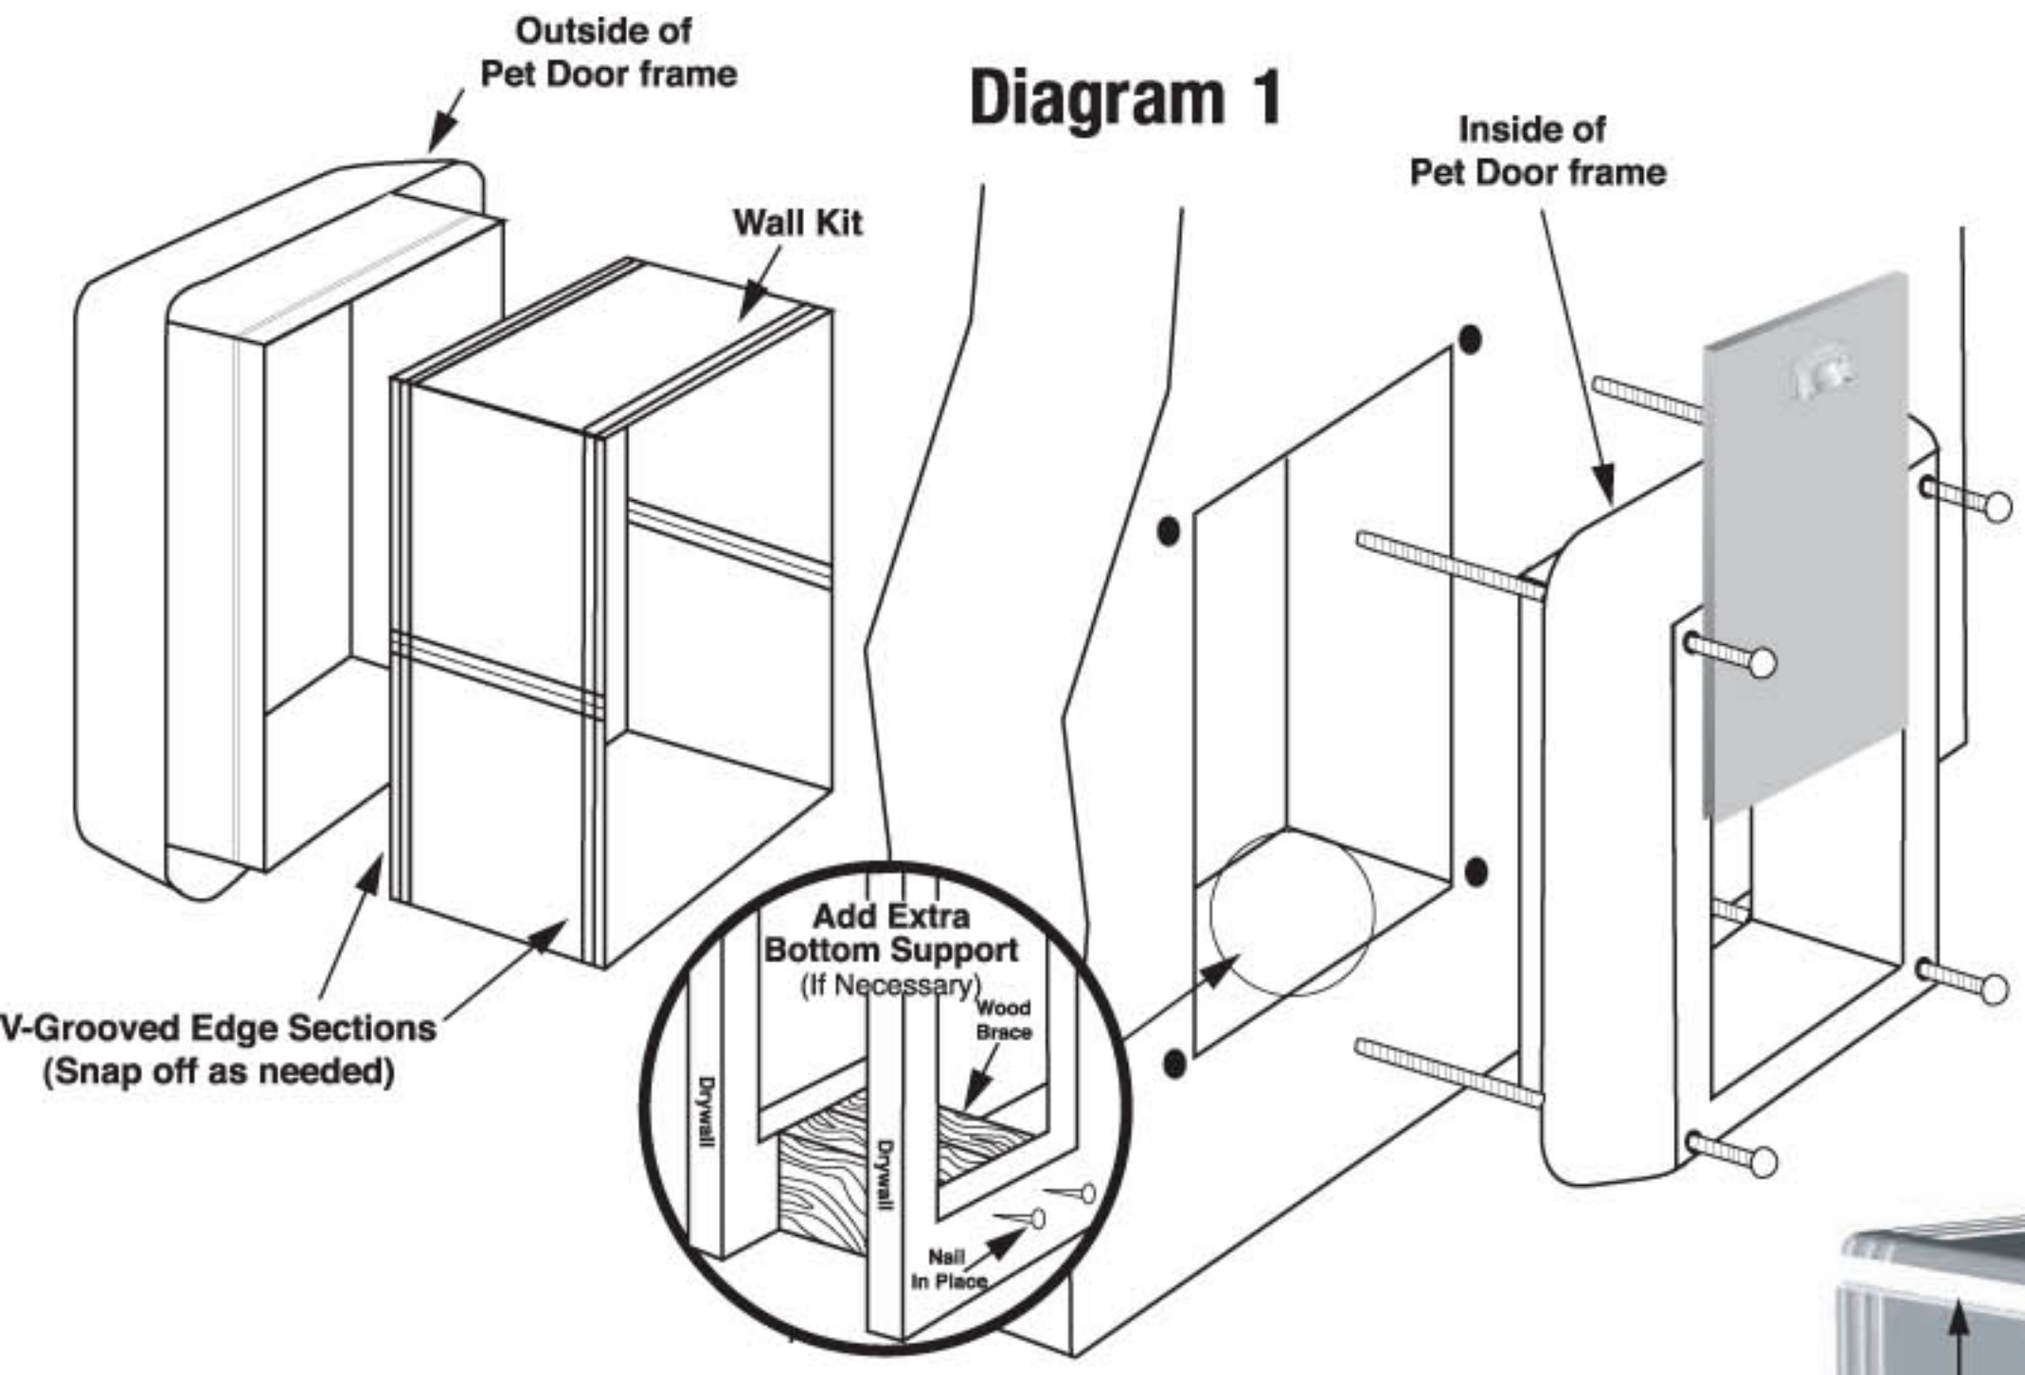


Press-fit all panel sections together

**Step #3.** With a second person holding "OUTSIDE FRAME" of dog door in place, insert assembled Wall Kit into opening from inside. Place "INSIDE FRAME" of dog door into opening around the Wall Kit.

The Wall Kit will be slightly shorter than the tunnel. Push Wall Kit until it is touching the ribs on the inside frame and/or caulk in place with silicone caulk (not supplied).

**Step #4.** Insert Wall Kit screws to complete the installation. **Do not overtighten.**

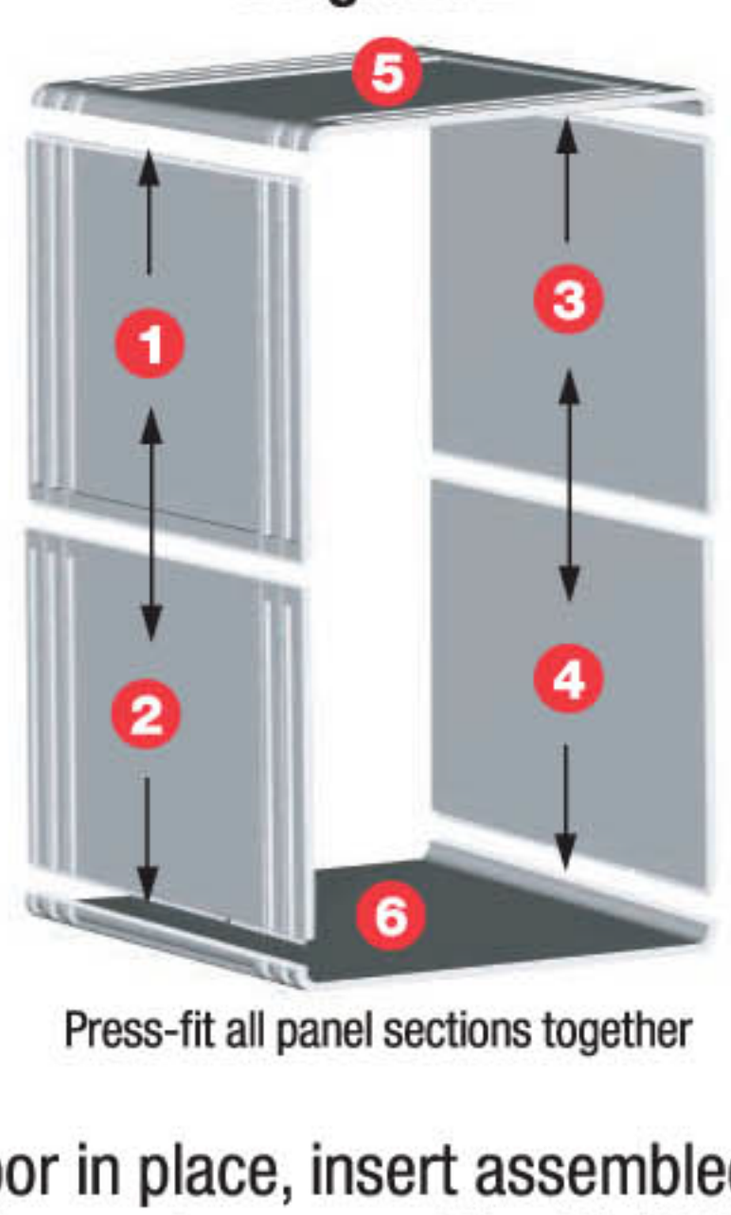**Step #5.** For better insulation, you may use silicone caulking to fill any gaps around your Wall Kit.